

HG-3

CRAFT HOT MELT GLUE GUN

12 May 2017

YOUR SMART ADVANTAGES

- Easy to use trigger action
- Designed to fit neatly in the hand
- Easy to load and use
- Designed for Bostik Glue Sticks

USES

- The HG3 Glue Gun is designed for:
 - DIY tasks
 - Household repairs
 - Hobby
 - Craft work
 - Home decor projects
- Instantly bonds most craft and household materials including, fabric, wood, leather, most plastics, ceramics and metal.

PRODUCT CHARACTERISTICS

Type	Light weight DIY glue gun
Electrical rating	220 - 240V; 50 - 60Hz, 13W, Class II
Melt temperature	190°C
Weight	200g
Product codes	
HG3 Hot melt glue gun	30804587
HM Glue Sticks pack of 10/ 10 pack per carton	30804375

DIRECTIONS FOR USE

Read and understand the Safety Data Sheet before using this product.

SURFACE PREPARATION

Ensure all surfaces are clean and dry.

APPLICATION

- Clip metal stand on glue gun. Always use stand. Never lie gun down on its side when heating, using or whilst cooling as this may cause gun failure and is a fire hazard.
- Insert Bostik HM Glue Stick gently through channel at the back of gun.

- Never use excessive force when inserting glue stick as this may clog the channel. Plug cord into electrical outlet and wait 5 minutes to heat up the glue.
- Ensure glue is hot or glue will not extrude through the gun.
- Apply adhesive by gentle continuous pressure on to the more difficult surface to bond. Usually smooth surfaces are more difficult to adhere than rough, porous surfaces.
- Release trigger to stop flow of glue.
- Glue does not need to be spread. **DO NOT TOUCH MOLTEN ADHESIVE DUE TO SERIOUS RISK OF BURN.**
- Join surfaces as quickly as possible for optimum bond strength. To bond foam products (polystyrene foam, etc.) to another surface, apply adhesive in an "S" pattern to the surface to which the foam will be bonded, rather than directly to the foam.
- To bond fabrics, use a smaller "S" pattern for additional strength.
- When you have finished using the gun place it on its stand, switch off and unplug it and allow it to cool down before storage.
- Allow the glue stick to remain in the gun - **DO NOT REMOVE THE GLUE STICK FROM THE REAR OF THE GUN AT ANY TIME.**

LIMITATIONS

- For domestic use only
- Children should only use the gun under adult supervision
- Recommended for light assembly jobs.
- Switch gun off as soon as bonding is complete - do not leave switched on for extended periods.
- This tool must be placed on its stand when not in use.
- A fire may result if the gun is not used with care.
- **DO NOT** allow the nozzle of the heated gun to make contact with any surfaces as it may cause damage. Hot molten glue may damage some surfaces.
- **DO NOT** leave gun unattended when it is switched on, and unplug cord when not in use.
- **DO NOT** use the gun in damp or wet conditions or expose it to rain.
- Be careful when using the gun in places where there are combustible materials.
- **DO NOT** apply to the same place for a long time.
- **DO NOT** use in the presence of an explosive atmosphere.
- Be aware that heat may be conducted to combustible materials that are out of sight.
- **NEVER** put any object in the gun other than the glue sticks recommended.

HG3 HOT MELT GLUE GUN

- If the power cord is damaged it must be replaced by the manufacturer, its service agent or similar qualified person in order to avoid a hazard.

CLEANING

Small drops of glue can be easily removed when cold. Residual glue can be re-melted and removed from most bonded surfaces with a warm knife.

STORAGE AND SHELF LIFE

Store in cool, dry conditions out of direct sunlight .

PRECAUTIONS IN USE

Complete details on each of the products mentioned are available on the product Safety Data Sheets. To ensure no harm is caused to persons using Bostik products, it is recommended that all concerned read the appropriate Safety Data Sheets. Visit www.bostik.co.nz for copies.

USE EXTREME CARE

MOLTEN MATERIAL WILL BURN SKIN.
DO NOT TOUCH MOLTEN GLUE OR HOT PARTS OF GUN.
WEAR PROTECTIVE CLOTHING AND EYE PROTECTION WHEN WORKING WITH HOT GLUE.
DO NOT IMMERSE GUN IN WATER AS THIS WILL CAUSE ELECTRIC SHOCK

FIRST AID

Swallowed: Do not induce vomiting, give a glass of water. Contact a doctor if feeling unwell.

Skin: DO NOT remove from skin if burned on. Get medical advice immediately.

For emergency information contact the National Poisons Information Centre, phone 0800 764 766 (0800 POISON) or CHEMCALL, phone 0800 243 622.



This datasheet is for the general help of users. It is provided in good faith. The data is current and accurate to the best of our knowledge. Differing materials, substrates, environments, site conditions, and product storage, handling and application may affect results. Users should carry out tests to decide the product's suitability for purpose. This data sheet and the properties of the product may change without notice. Users, suppliers and retailers should check that the data sheets they have are the latest. To the maximum extent permitted by law, Bostik disclaims all warranties in relation to manufacture and use of the product. Bostik is not liable for representations made by users, suppliers or retailers about the product. Bostik is not liable for any loss or damage resulting from incorrect, careless, or negligent use or storage of the product, including use of out of date product. Any liability arising from use of the product is limited to the replacement or purchase price of the product. Bostik does not exclude rights and remedies that be excluded by legislation, for example under the Consumer Guarantees Act 1993. Sale of the product by Bostik is subject to the Bostik New Zealand Limited Conditions and Terms of Sale. For more information on Bostik, products, and conditions of use and sale visit www.bostik.co.nz.

Technical Advice Tel: 0508 222 777 nzsales@bostik.com